


ASSEMBLY INSTRUCTIONS

ITEM NO. 2501


LIST OF PARTS:

- | | |
|-------------------------|----------|
| A. TOP TOWER SECTION | (1.PCS.) |
| B. BOTTOM TOWER SECTION | (1.PCS.) |
| C. WOODEN BASE | (1.PCS.) |
| D. WOODEN BALLS | (4.PCS.) |
| E. PLASTIC SCREWS | (4.PCS.) |
| F. TOOL | (1.PCS.) |
| G. RUBBER FEET | (4.PCS.) |

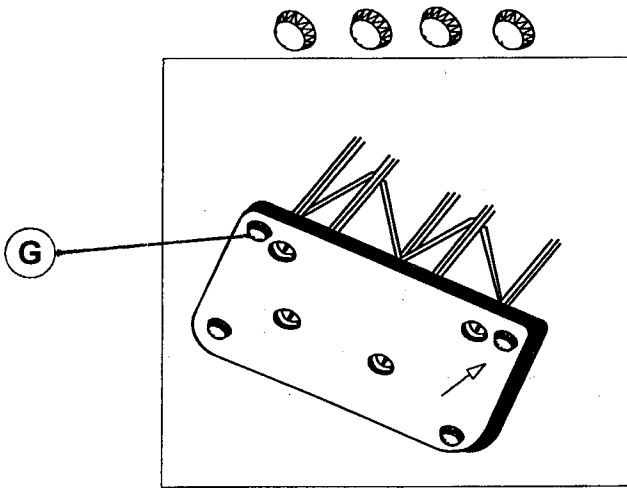

INSTRUCTIONS:

- 1) INSERT BOTTOM TOWER SECTION (B) INTO WOODEN BASE (C) (MAKE SURE THREADED WIRE ENDS GO THROUGH THE BASE)
- 2) CAREFULLY SCREW THE PLASTIC SCREWS (E) TO SECURE THE BOTTOM SECTION TO THE BASE WITH THE PROVIDED TOOL (F) (APPLY PRESSURE)
- 3) THEN PROCEED TO STICK THE RUBBER FEET (G) ON EACH CORNER OF THE BOTTOM OF THE BASE, TO MAKE THE TOWER STURDY. (DO NOT COVER THE HOLES)
- 4) NEXT INSERT TOP WIRE SECTION (A) INTO THE BOTTOM TOWER SECTION (B)
- 5) FINALLY INSERT THE FOUR WOODEN BALLS (D) ON TOP OF THE TOWER.

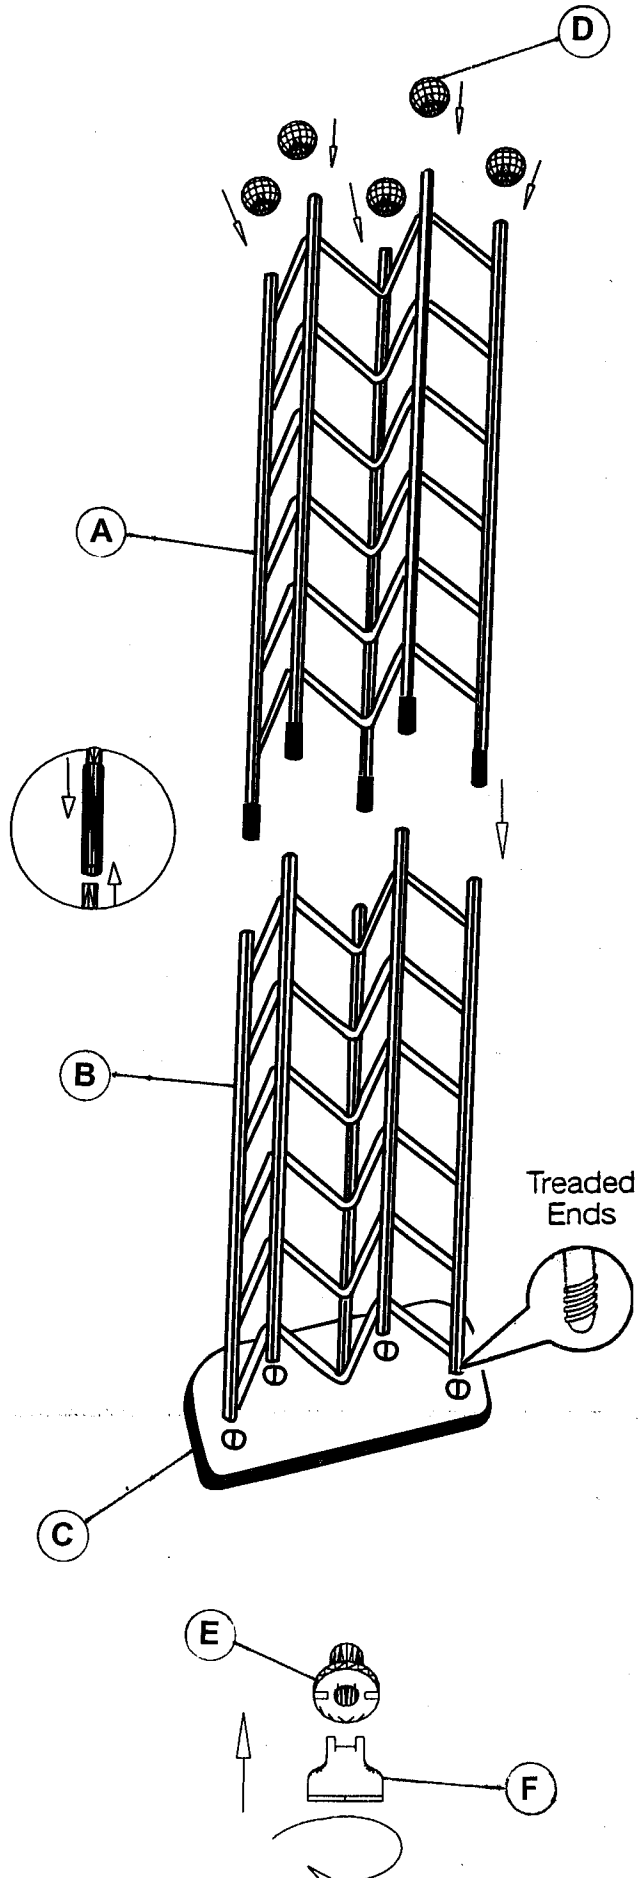

ATLANTIC®

2002 ATLANTIC, INC.
 Santa Fe Springs, CA. USA
 U.S. AND OTHER FOREIGN PATENTS PENDING
 ALL RIGHTS RESERVED
 WEB SITE: <https://www.atlantic-inc.com>

MADE IN CHINA